


FACE RECOGNITION READER


EP-FR701





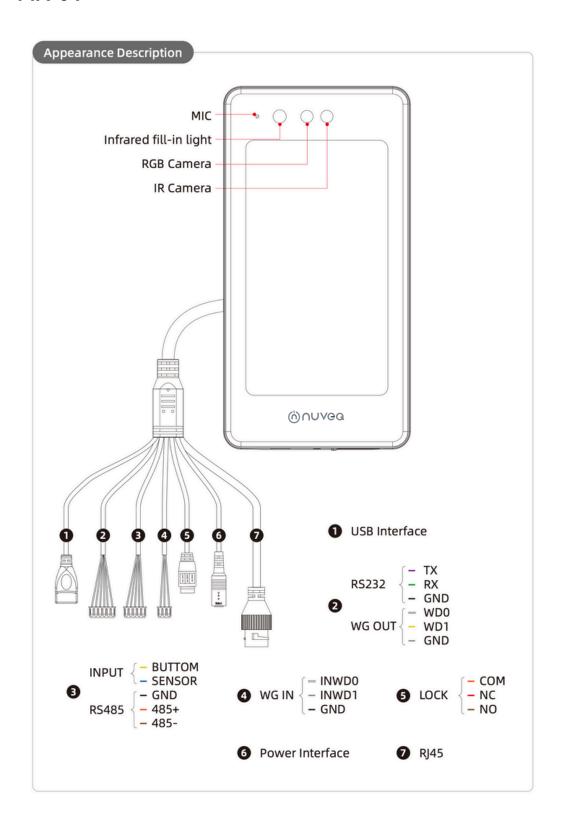


FACE RECOGNITION READER EP-FR701

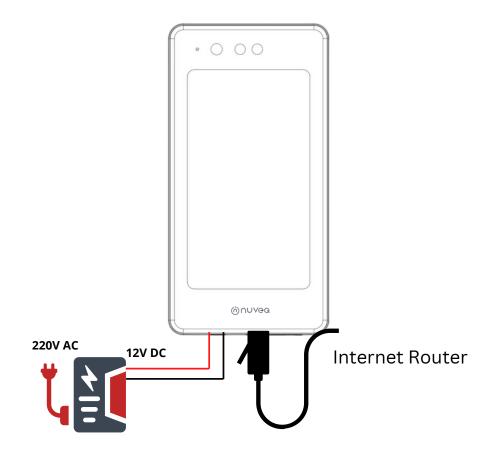

Configure as Reader

2. Weigand Output

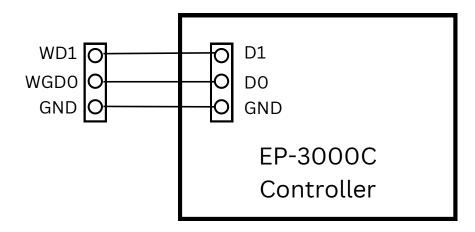







FACE RECOGNITION READER EP-FR701

Configure as Controller

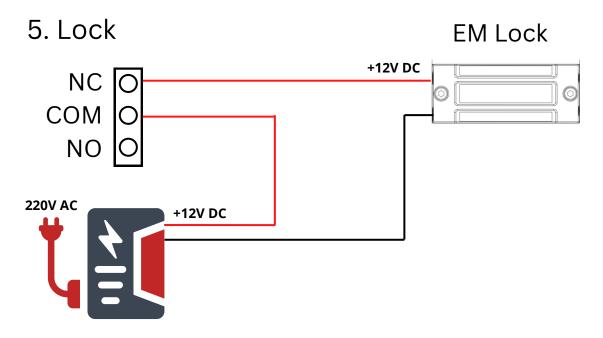

3. Input

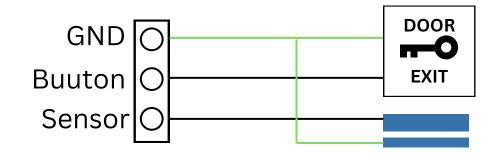






FACE RECOGNITION READER

EP-FR701

Installation Steps




During wall installation, holes shall be drilled according to the hole position of the installation sticker, and the wall mounting shall be embedded in the hole

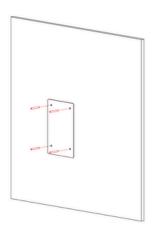



For wall mounting, use self tapping screws to fix the bracket on the wall (use hole 1);

When mounting with the 86 box, the bracket is fixed on the 86 box with machine screws (use hole 2);

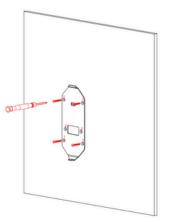



Fasten the device to the wall mounting bracket, and use the wrench to tighten the bottom set screw

